LP6 Plus Volume Ventilator -And-LP10 Volume Ventilator With Pressure Limit Clinician's Manual



Important Note: Read this manual in its entirety before using the ventilator. Keep this manual for future reference.

PURITAN BENNETT

For more information: Contact your Puritan Bennett representative for information on our full line of medical equipment and related services. Or, you may contact Puritan Bennett Inc. directly.

Puritan Bennett Technical Services: 1.800.255.6774

Contents

Introduction1
Purpose of the Manual 1
Symbols and definitions
Warnings and Cautions
Electrical Interference
General Description5
Alarm Condition
Responding to Alarms
Troubleshooting Guide
Front Panel
Upper Section
Lower Left Section
Lower Right Section
Rear Panel
Operating Controls
Operating Modes
Assist/Control
Assist/Control with Pressure Limit (LP10 Only)
SIMV (Synchronized Intermittent Mandatory Ventilation) 18
SIMV with Pressure Limit 19
Pressure Cycle
Standby
Ventilator Parameters
Volume
Breath Rate
Breath Rate
Breath Rate 20 Inspiratory or I-Time 20 Breathing Effort 22
Breath Rate 20 Inspiratory or I-Time 20 Breathing Effort 22 Pressure Alarms 22
Breath Rate20Inspiratory or I-Time20Breathing Effort22Pressure Alarms22Pressure Limit Control (LP10 Only)23
Breath Rate20Inspiratory or I-Time20Breathing Effort22Pressure Alarms22Pressure Limit Control (LP10 Only)23Power Sources26
Breath Rate20Inspiratory or I-Time20Breathing Effort22Pressure Alarms22Pressure Limit Control (LP10 Only)23Power Sources26AC Power26
Breath Rate20Inspiratory or I-Time20Breathing Effort22Pressure Alarms22Pressure Limit Control (LP10 Only)23Power Sources26AC Power26External Battery 12 Volt DC27
Breath Rate20Inspiratory or I-Time20Breathing Effort22Pressure Alarms22Pressure Limit Control (LP10 Only)23Power Sources26AC Power26External Battery 12 Volt DC27Using a Car Battery27
Breath Rate20Inspiratory or I-Time20Breathing Effort22Pressure Alarms22Pressure Limit Control (LP10 Only)23Power Sources26AC Power26External Battery 12 Volt DC27Using a Car Battery27Internal Battery 12 Volt DC28
Breath Rate20Inspiratory or I-Time20Breathing Effort22Pressure Alarms22Pressure Limit Control (LP10 Only)23Power Sources26AC Power26External Battery 12 Volt DC27Using a Car Battery27Internal Battery 12 Volt DC28Routine Safety Check29
Breath Rate20Inspiratory or I-Time20Breathing Effort22Pressure Alarms22Pressure Limit Control (LP10 Only)23Power Sources26AC Power26External Battery 12 Volt DC27Using a Car Battery27Internal Battery 12 Volt DC28Routine Safety Check29Monthly Safety Check31
Breath Rate20Inspiratory or I-Time20Breathing Effort22Pressure Alarms22Pressure Limit Control (LP10 Only)23Power Sources26AC Power26External Battery 12 Volt DC27Using a Car Battery27Internal Battery 12 Volt DC28Routine Safety Check29Monthly Safety Check31Installation34
Breath Rate20Inspiratory or I-Time20Breathing Effort22Pressure Alarms22Pressure Limit Control (LP10 Only)23Power Sources26AC Power26External Battery 12 Volt DC27Using a Car Battery27Internal Battery 12 Volt DC28Routine Safety Check29Monthly Safety Check31Installation34Mounting or Positioning34

Emergency Vehicle
Wheelchair
Power Connections
General
AC Power
External Battery 12 Volt DC
Battery Performance
Testing the Batteries
Special precautions when using an external battery
Internal Battery 12 Volt DC
Patient Ventilator Circuit
Exhalation Manifold
Humidification
Short Term
Extended Use
Supplemental Oxygen
Methods
Accessories
Positive End Expiratory Pressure (PEEP)
Pressure Monitoring
Supplemental Oxygen 53
Humidification
Remote Alarm
Printer
Cleaning and Maintenance
Patient Circuit and Humidifier
Inlet Air Filter
Ventilator Surface
Storage of the Ventilator
Scheduled Maintenance
Service Policy
Specifications
Limited Warranty
Keyword Index
•

Introduction

Purpose of the Manual

This Clinician's Manual will help you understand the operation of the LP6 Plus and LP10 Volume Ventilators. It provides detailed information for physicians and other clinical personnel about the installation, safe use, and verification of the operation of the LP6 Plus and LP10 Volume Ventilators. It provides the caregiver guidelines for safe ventilation that are specific to the ventilator. It is not a complete maintenance document. Therefore, it contains no disassembly, repair, or reassembly instructions or diagrams.

Carefully read and understand all instructions before using the ventilator. Use the instructions contained herein in conjunction with those set by the patient's physician. No instruction in this manual is intended to replace accepted medical practice regarding the use of the ventilator or the care of the patient.

As you read this manual, you will notice **Cautions** and **Warnings** in boxes on many pages. Pay very special attention to these boxes. They will tell you what to do and what to avoid as you use the ventilator.

The difference between Warnings and Cautions is:

A **Warning** contains information about possible hazards to the patient, the care provider, or the service technician.

A Caution includes information about how to avoid equipment damage.

The **Notes** and **Accessories** sections found at the back of this manual are for your use in applying this manual's information to a specific patient. Puritan Bennett-supplied accessories include information concerning their use with the ventilator.

Symbols and definitions

The following symbols appear on the LP6 Plus and LP10 ventilators.

І О	Power switch ON position, connection to mains power Power switch OFF position, disconnection from mains power
\wedge	Attention, consult accompanying manual.
~AC	Alternating current
	Direct current
V	Volts
Α	Amperes
ወ	Standby mode of operation
() ()	Canadian Standards Association
- +	Battery test switch
ж	Alarm silence switch
4 0	Alarm
\$	Power
(ŲL)	Underwriters Laboratory
ø	Patient pressure
£7 →	External battery connection
	Remote alarm
🗀 Test	Battery test level
	Manual reset

Warnings and Cautions

Warnings

Always follow the physician's prescription when using the ventilator.

Always operate and store the ventilator according to the specifications and instructions set forth in this manual.

Use only Puritan Bennett-approved accessories and products with the ventilator. The use of other accessories may damage the unit and endanger the patient.

Perform daily and monthly verification of the ventilator's operation as identified in this manual.

Always stabilize and verify ventilator performance before connecting the patient to the unit.

All alarms indicate a potential risk to patient safety. When an alarm sounds, provide immediate attention, care, and support to the patient as dictated by the situation.

The LP6 Plus and LP10 ventilators shall not be used with flammable anesthetic agents.

Do not use in direct sunlight.

Cautions

Refer any adjustments or procedures exceeding the scope of this manual to an Puritan Bennett Technical Service Representative. Refer to the Puritan Bennett Service Policy on page 60.

Caution: Federal Law (U.S.A.) restricts this device to sale or use by or on the order of a licensed physician.

Electrical Interference

Caution

Your ventilator is an electronic instrument. Any electronic instrument is subject to electrical interference. Electrical interference in excess of 10 V/m may keep your ventilator from working properly.

Television sets, cordless or cellular telephones, microwave ovens, air conditioners, food processors, and other appliances can be sources of electrical interference. To avoid electrical interference between your ventilator and these appliances, you must follow these instructions:

- Never place your ventilator near these appliances.
- Never plug the ventilator into the same A.C. electrical outlet as these appliances, nor into electrical outlets on the same circuit as these appliances.
- Never place the cables from ventilator accessories near these appliances.

Warning

Electrical interference may keep your ventilator from working properly, which may create a hazard to the patient.

Note The ventilator is exempt under Section 15.801 (c)(5) of the no interference regulations adopted by the FCC. If television interference does occur, contact Technical Services at Puritan Bennett, Inc. or a television repair technician for suggestions. Or, move the television to an A.C. electrical outlet that does not allow interference.

General Description



The Puritan Bennett LP6 Plus and LP10 Volume Ventilators are intended for use in a non-acute care institution or transport, on pediatric and adult patients. It is to be operated in accordance with the product labeling contained in this instruction manual.

The LP6 Plus and LP10 Volume Ventilators are microprocessor-controlled volume ventilators. They provide continuous respiratory support for patients with respiratory insufficiencies in a skilled nursing facility or hospital, or during transport. Because of the compact design and light weight, the units are highly portable.

The ventilators offer a wide range of delivery volumes, inspiratory times, and breathing rates. The physician or the respiratory therapist can set the appropriate ventilation via the controls located in the recessed front panel. The magnetically latched door panel and the control knobs are designed to prevent tampering and accidental resetting.

Audible and visual alarms quickly identify problems. See pages 6 through 9 for a complete discussion of these alarms.

Alarm Condition

Warnings

All alarms indicate a potential risk to patient safety. When an alarm sounds, provide immediate attention, care, and support to the patient as dictated by the situation.

Any device is subject to unpredictable failures. To ensure patient safety, an appropriately trained caregiver should monitor ventilation. If the patient's condition warrants the use of an independent secondary alarm, remote alarm, or another external monitoring device, the physician should prescribe it. The physician should also determine to what level the patient may require an alternate means of ventilation.

Responding to Alarms





The ventilator has visual and audible alarms. The audible alarm is usually a pulsating tone. Both the ventilator and the remote alarm emit these tones. Flashing or steady light(s) on the ventilator indicate the source of the problem.

A Pulsating Audible Alarm and Flashing Light(s):

The Low Power, High Pressure, Setting Error, and Power Switchover alarms all use this type of alert signal.

A Steady Audible Alarm and Steady Lights:

This combination indicates a detected microprocessor error in the ventilator.

Single Reminder Tone:

A single tone sounds every five minutes when the internal battery powers the ventilator.



Note In Assist/Control and SIMV modes, the High Pressure Alarm sounds whenever the air pressure exceeds the selected high pressure limit. In the Pressure Cycle mode, however, the High Pressure Alarm sounds only when the air pressure exceeds the selected high pressure limit by 10 cmH_2O/hPa .

When an alarm sounds:

First, attend to the patient immediately. Then, check the flashing or steady light(s) on the ventilator to identify the source of the problem.

You may press the Alarm Silence/Reset button to silence the alarm. This turns off the signal for one minute. If the alarm condition is corrected during that minute, the alarm light will turn off.

A microprocessor error cannot be silenced. You cannot silence an alarm before it occurs.

Note If a High Pressure, or Setting Error alarm condition is corrected before you press Alarm Silence/Reset, the audible alarm will stop but the light will continue to flash. Press Alarm Silence/Reset to turn off the light.

If a Low Pressure/Apnea, Low Power or Power Switchover alarm condition is corrected before you press Alarm Silence/Reset, both the audible and visual alarms will continue. You must press Alarm Silence/Reset to turn off the audible alarm and the light.

Warning

If alarms continue to sound, provide another means of ventilation and contact your homecare dealer.

Troubleshooting Guide

Conditions	Probable Cause	Solution
All lights turn on and audi- ble alarm sounds	Normal condition. Alarms test when unit is turned on.	Alarms will stop in two seconds.
	Normal; manual alarm test.	Alarms will stop in one second.
	Microprocessor error.	Turn vent off and set mode to Standby. Wait a few seconds. Return switches to prescribed settings. If alarm persists, provide another means of ventilation.
Low Pressure/Apnea Alarm:	The patient is not breathing.	Check the patient for breathing effort.
Pulsating audible tone with flashing light	Leaks or loose connections in the patient circuit.	Check connection of the patient circuit to the ventilator; check all connections for leaks and tightness, especially at the humidifier, trach tube, and exhalation valve.
	Water in small-bore tubing.	Inspect and remove water from small- bore tubing.
	Crimped small-bore tubing.	Uncrimp the small-bore tubing.
	PEEP pressure set higher than the Low Alarm control setting.	Set Low Alarm control setting higher than the PEEP pressure.
	The patient's breathing effort is less than the Breathing Effort control setting.	Set Breathing Effort so the patient's breathing effort turns on the Breathing Effort light.
	Patient speech or other activities lower patient airway pressure.	Low pressure alarm sounds whenever low pressure limit is not reached for two consecutive breaths. Review the section on alarms.
	Low alarm setting is higher than Pres- sure limit setting. (LP10 only)	Correct to the prescribed value.
	Volume set below patient's tidal vol- ume.	Correct to the prescribed value.
	Pressure Limit level is set too low. (LP10 only)	Correct to the prescribed value.
	Incorrect control settings.	Reset to prescribed values.
	Leaks or obstructions in the patient cir- cuit.	Check for leaks or crimped tubing.
	Other causes.	Notify your physician and your home- care dealer

Troubleshooting Guide

LP6 Plus and LP10 Clinician's Manual

Conditions	Probable Cause	Solution					
Low Power Alarm: Pulsating audible tone with flashing light	Failure to recharge the Internal battery.	Operate the ventilator on AC power for at least three hours, or place ventilator in Standby Mode while on AC power; use backup ventilator.					
High Pressure Alarm:	Water in the tubing.	Remove water from tubing.					
Pulsating audible tone with flashing light	Crimped tubing.	Straighten crimped tubing.					
5 5	Coughing or other high-flow expira- tory efforts.	Treat patient's cough. The alarm is appropriate for these conditions.					
	Patient inspiratory resistance or compli- ance changes.	Have physician determine new ventila- tor settings.					
	A sticky Pressure Limit control.	Occlude the end of the patient circuit to free the valve.					
	Airway obstruction	Check for trach obstruction or for a condition in which the patient requires suctioning.					
	Malfunction in the exhalation manifold.	See the manifold manufacturer's instructions.					
	Pressure Limit setting is higher than the High Alarm setting. (LP10 only)	Reset both to the prescribed values.					
Setting Error Alarm	Inappropriate setting or settings beyond the capabilities of the machine.	Readjust settings to the physician's pre- scription.					
	Dirty inlet filter.	Replace filter.					
Internal Battery light flashes	Unit has not switched to external bat- tery.	Check for unconnected or miscon- nected battery cable. Check for blown fuse in the battery cable. Use another external battery.					
	DC circuit breaker is open.	Reset by pushing in protruding rod.					
Single tone	Unit is operating on internal battery.	Check for unconnected or miscon- nected battery cable. Check for blown fuse in the battery cable. Use another external battery.					
Green AC Power light does	AC circuit breaker is open.	Turn it back ON.					
not glow	AC power cord is not connected.	Plug in the cord.					
	No power at the wall outlet.	Use an active outlet.					

Warning

If the problems continue, provide another means of ventilation and contact your homecare dealer.

Front Panel



The Front Panel of the ventilator has three sections:

- The upper section has small lights, two touch button pads, and a
- meter. The lower left section has the operating controls. The physician pre-scribes their setting. To prevent accidental resetting, they are behind a closed panel.
- The lower right section has the Pressure Limit control and the con-• nections for the Patient Circuit.



Upper Section 1. Alarm Lights: When flashing or continuously lit, they identify a condition that demands immediate attention. There is also an audible tone when these lights begin flashing.

- Alarm Silence/Reset Button: This has five uses. 2.
- Push to test the alarms.
- Push to silence alarms for 60 seconds.
- Push to reset the alarm after correcting the problem. Push simultaneously with the Battery Test Button for operating hours. (See the Scheduled Maintenance portion of the manual, page 59.)
- Use this button with other controls to start the self-test. (See page 30.)
- 3. Power Source Lights:
- The top light is green when the ventilator is AC powered.
- The middle light is amber when an external battery powers the ventilator.
- The bottom light flashes amber when the ventilator's internal bat-. tery is in use. A single tone also beeps every five minutes.
- **Battery Test Button:** It has four uses. 4.
- When pressed, the Pressure Meter displays the charge status of the
- battery in use (internal or optional external battery). Push simultaneously with the Alarm Silence/Reset button for an indication of operating hours. (See the Scheduled Maintenance portion of this manual, page 56.)
- Press the button to print a report from an attached printer.
- Use this button with other controls to start the self test. (See page 30.)
- 5. Breathing Effort Light: This light turns green whenever the ventilator senses the patient's effort to breathe. The Breathing Effort control sets the sensitivity.
- 6. Patient Pressure Meter: The meter displays three pieces of information:
- Pressure at the Exhalation Manifold.
- The number of hours of ventilator operation.
- The charge status of the internal or attached external battery.

LP6 Plus and LP10 Clinician's Manual

Lower Left Section



- **1.** Control Panel Door: This door is latched magnetically to protect the controls from accidental resetting.
- 2. Alarm Reference Guide: Consult this guide for a summary of alarms and the action you should take. You will find the Guide on the inside of the Control Panel Door.
- **3. Control Knobs:** They are behind the closed Control Panel Door. The patient's physician prescribes the settings for these controls. See pages 16 through 22 for details.

Lower Right Section



- **1. Patient Air Tube:** The Patient air hose connects to this tube. The ventilator delivers air through this tube.
- **2. Exhalation Valve Port:** The Exhalation Pressure Tube of the Patient Circuit connects to this port.
- **3. Patient Pressure Port:** The Patient Pressure Tube of the Patient Circuit connects to this port.
- **4. Pressure Limit Control (LP10 Only):** This control sets the air pressure limit during a forced or assisted breath. For use in Assist/Control or SIMV modes only; use in other modes may not allow effective ventilation. See pages 23 through 25.



Rear Panel

1. Inlet Filter: The ventilator draws in air through this filter.

Warning

Do not block the inlet filter. (Keep away from curtains.)

- 2. Cord Wrap and Rear Feet: There is a foot at each corner.
- **3.** AC Power Switch/Circuit Breaker: This is the ON/OFF switch for AC power. It also has a built-in circuit breaker. 1 is power connected to mains and 0 is power disconnected from mains.
- **4. Communications Port:** A special cable fits here and leads to an optional printer.
- Note The ventilator and printer should be turned off before connection or disconnection of the printer.
 - **5. Serial Number Plate:** This has Puritan Bennett's identification number for the ventilator. It also lists the unit's power requirements.
 - **6.** External 12 Volt DC Battery Connector: This is where you plug in an external battery cable.
 - **7. Remote Alarm Connection:** A remote alarm (optional) can summon the caregiver when an alarm sounds.
 - 8. Rear Carrying Handle Recess
 - 9. AC Plug Holder
 - **10. Vent:** Warm air from the unit's circuitry leaves the ventilator and cool air enters through this vent. This cools the ventilator.

Warning Do not block rear panel vent

11. Pressure Relief: This prevents the air pressure from exceeding approximately 100 cmH₂O/hPa.

Warning

Do not block the pressure relief valve.

- **12. DC Circuit Breaker:** This circuit breaker protects the ventilator when it is powered by an external battery.
- **13. Voltage Select Switch:** This switch selects 110 or 220 volts when it is powered by an external battery

Caution

- **n** An incorrect switch setting may damage your ventilator.
 - **14. Mounting Rails:** These are used to mount and connect accessories to the ventilator.

Operating Controls



- **5. Breathing Effort:** This adjusts the ventilator's sensitivity to the patient's breathing effort. When the patient's effort reaches the setting, the Breathing Effort light turns on and the ventilator delivers a breath. Push in the control knob to change the setting.
- 6. High Alarm/Limit: This sets the point at which the High Pressure alarm will sound. If the pressure exceeds this limit, the High Pressure alarm sounds (except in the Pressure Cycle mode). Delivery of this breath stops after the pressure reaches this limit. The audible alarm is automatically silenced if the following breath does not exceed the setting.

Often, when the high alarm sounds, the patient circuit has an obstruction. Clearing the circuit will stop the alarm.

7. Low Alarm: This establishes the pressure which must be exceeded with "controlled" or "assisted" breath. The alarm sounds only when two consecutive breaths do not reach the selected limit, or if the limit is reached but the pressure fails to return to a level below the limit. Normally, this setting is just below the pressure you need for proper ventilation.

If this alarm sounds, look for a leak in the patient circuit. A leak or disconnection of the circuit is often the cause for the alarm.

Note Some circuit components will prevent a Low Pressure alarm by keeping the pressure in the circuit above the alarm limit. Examples of these components include hydrated heat and moisture exchangers (HMEs) and tracheostomy tubes. If the patient circuit is disconnected from the patient, but still connected to these components, a Low Pressure alarm may not sound.

Where such disconnections from a ventilator-dependent patient are possible, you must set the Low Pressure alarm to a level that permits an alarm to sound. To do this, simulate the disconnection; if a Low Pressure/Apnea alarm does not sound after two breath cycles, increase the alarm limit until an alarm sounds.

8. Pressure Limit (LP10 Only): This limits the maximum pressure developed for each breath. For use with Assist/Control or SIMV modes only; use in other modes may not allow effective ventilation. See Operating Modes section, below, for details.

Operating Modes

Assist/Control In this mode, if the breathing effort is strong enough to trigger the Breathing Effort light, the ventilator assists breathing. The ventilator then delivers the selected prescribed volume of air. If the patient makes no effort to breathe and, thus, fails to activate the Breathing Effort light, the ventilator takes control. It delivers breaths at the selected rate.

Breath Rate set at 1 - 5 BPM

If the patient does not start a breath on his/her own for 10 seconds, the Apnea alarm sounds and alerts the caregiver. Meanwhile, the ventilator delivers breaths at 10 BPM at the selected volume.

Breath Rate set at 6 BPM or more

No alarms sound if the patient fails to start a breath. The ventilator continues to deliver breaths at the selected rate and volume.

Assist/Control with Pressure Limit (LP10 Only) The ventilator functions as described under the Assist/Control mode. The only difference is that the ventilator will limit the pressure during a delivered breath.

Note Since the pressure limit function bleeds off air to limit pressure, the volume of air delivered will be less than the set value.

SIMV (Synchronized Intermittent Mandatory Ventilation)

In this mode, the patient can breathe unassisted and on his/her own between ventilator delivered breaths. The ventilator monitors these spontaneous breaths.

If the patient's effort is not strong enough to turn on the Breathing Effort light or the patient makes no effort, the ventilator delivers a controlled breath. All this depends on the breath rate setting:

Breath Rate set at 1 - 5 BPM

If the patient does not start a breath on their own for 20 seconds, the Apnea alarm sounds and alerts the caregiver. Meanwhile, the ventilator delivers breaths at 10 BPM at the selected volume.

Breath Rate set at 6 BPM or more

No alarms sound if the patient fails to start a breath. The ventilator continues to deliver breaths at the selected rate and volume.

SIMV with Pressure Limit	The ventilator functions as described under the SIMV mode. The only difference is that the ventilator will limit the pressure during a delivered breath.
--------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------

Pressure Cycle In this mode, the ventilator assists or controls the patient's breathing as it does in the Assist/Control mode. But, there's a difference. If the air pressure exceeds the level set on the High Alarm/Limit, delivery of the breath is stopped and the high pressure alarm does not sound. The high pressure alarm sounds only if the air pressure happens to exceed the High Alarm/Limit by 10 $\text{cmH}_2\text{O}/\text{hPa}$.

Note The high pressure alarm sounds only if the air pressure happens to exceed the limit by $10 \text{ cmH}_2\text{O/hPa}$.

Breath Rate set at 1 - 5 BPM

If the patient does not start a breath on his/her own for 10 seconds, the Apnea alarm sounds and alerts the caregiver. Meanwhile, the ventilator delivers breaths at 10 BPM.

Breath Rate set at 6 BPM or more

No alarms sound if the patient fails to start a breath. The ventilator continues to deliver breaths at the selected rate and volume.

Warning In this mode, when the pressure reaches the level of the High Alarm/Limit, the ventilator is designed to cycle into expiration without sounding an alarm. It is unlikely that the pressure will exceed the set limit by 10 cmH₂O/hPa.

Standby The ventilator will not deliver breaths with the control in this mode. It will, however, charge the internal or connected external battery, but only when the AC Pwr/Batt charge is ON with the unit plugged into a wall outlet. The patient may breathe through the patient circuit in this mode.

External and internal batteries charge equally well in all Modes.

Ventilator Parameters



Set the delivered, or tidal volume, with the front panel Volume control. This push-to-turn knob sets the piston excursion. Its range is from 100 to 2200 ml.



Breath Rate Adjust the rate (breaths per minute) with the Breath Rate control. Increments are 1 BPM for rates of 1 to 20 BPM, and 2 BPM for rates of 22 to 38 BPM. To find the maximum inspiratory flow rate, see the upper table on the next page.

Inspiratory or I-Time



This control adjusts the rate at which the prescribed tidal volume is delivered to the patient's lungs. Increments are 0.1 seconds for times of 0.5 to 1.0 seconds and 0.5 seconds from 1.5 to 5.5 seconds. You may also select an intermediate setting of 1.2 seconds.

Inspiratory time and Breath Rate determine both the Expiratory time and the I:E ratio. The Volume and Inspiratory Time setting determine the flow rate. (Example: 1.0 liters of vol. @ 1.0 sec Inspiratory Time = 60 LPM flow rate.) See the lower table on the next page.

NOTE Breath Rate and Inspiratory Time settings that produce an inverse I:E ratio cause a Setting Error alarm. The ventilator will not deliver inverse I:E ratios. It will deliver breaths at the set inspiratory time, an I:E ratio of 1:1.

> To determine the maximum inspiratory time or BPM values, use one of these formulas:

30 divided by Inspiratory Time = **Maximum** Breath Rate, or 30 divided by Breath Rate = **Maximum** Inspiratory Time.

Inspiratory Flow Rate Table

Cross reference set volume and inspiratory time to find average flow rate (iters per minute)

									Volume	(liters)							
		0.1	0.2	0.3	0.4	0.5	0.6	0.7	8.0	0.9	1.0	12	1.4	1.6	1.8	2.0	22
	0.5	12.0	24.0	36.0	48.0	60.0	72.0	84.0	96.0	108.0	120.0						
	0.6	10.0	20.0	30.0	40.0	50.0	60.0	70.0	80.0	90.0	100.0	120.0					
	0.7	8.6	17.1	25.7	34.3	42.9	51.4	60.0	68.6	77.1	85.7	102.9	120.0				
	0.8	7.5	15.0	22.5	30.0	37.5	45.0	52.5	60.0	67.5	75.0	90.0	105.0	120.0			
4.0	0.9	6.7	13.3	20.0	26.7	33.3	40.0	46.7	53.3	60.0	66.7	80.0	93.3	106.7	120.0		
52	1.0	6.0	12.0	18.0	24.0	30.0	36.0	42.0	48.0	54.0	60.0	72.0	\$4.0	96.0	108.0	120.0	
e ut	1.2	5.0	10.0	15.0	20.0	25.0	30.0	35.0	40.0	45.0	50.0	60.0	70.0	80.0	90.0	100.0	110.0
동문	1.5	4.0	8.0	12.0	16.0	20.0	24.0	28.0	32.0	36.0	40.0	48.0	56.0	64.0	72.0	80.08	0.88
-	2.0	3.0	6.0	9.0	12.0	15.0	18.0	21.0	24.0	27.0	30.0	36.0	42.0	48.0	54.0	60.0	66.0
	2.5	2.4	4.8	7.2	9.6	12.0	14.4	16.8	19.2	21.6	24.0	28.8	33.6	38.4	43.2	48.0	62.8
	3.0	2.0	4.0	6.0	0.8	10.0	12.0	14.0	16.0	18.0	20.0	24.0	28.0	32.0	36.0	40.0	44.0
	3.5	1.7	3.4	5.1	6.9	8.6	10.3	12.0	13.7	15.4	17.1	20.6	24.0	27.4	30.9	34.3	37.7
	4.0	1.5	3.0	4.5	6.0	7.5	9.0	10.5	12.0	13.5	15.0	18.0	21.0	24.0	27.0	30.0	33.0
	4.5	1.3	2.7	4.0	5.2	6.7	8.0	9.3	10.7	12.0	13.3	16.0	18.7	21.3	24.0	26.7	29.3
	5.0	1.2	2.4	3,6	4.8	6.0	7.2	8.4	9,6	10.8	12.0	14.4	16.8	19.2	21.6	24.0	26.4
	5.5	1.1	2.2	3.3	4.4	5.5	6.5	7.6	8.7	9.8	10.9	13.1	15.3	17.5	19.6	21.8	24.0

(Volume/Inspiratory Time) X 60 = Average Inspiratory Flow Rate

I:E Ratio Table

Cross reference set breath rate and inspiratory time to find ratio of inspiratory time to expiratory time

														1	reath	Flate	(BP)	d												
		1	2	3	- 4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	22	24	26	28	30	32	34	36	38
11	0.5	1.119	1.59	1.39	1:29	1.23	1:19	1:16	1:14	1:12	1:11	1:10	1.9	1:目	1:8	1.7	1.7	1.6	1.6	15	15	154	154	154	1:3	13	13	1.3	1.2	12
	0,6	1:99	1:49	1-32	1:24	1:19	1:16	1:13	1:12	1:10	1:9	1:8	1.7	1:7	1:0	1:0	15	15	1.5	114	114	1;4	13	1:3	1:3	1:2	1:2	1:1.9	1:1.8	1:1.0
	0.7	1:85	1:42	1:28	1:20	1:16	1:13	1:11	1:10	1:9	1:8	1:7	1:5	1:5	15	15	1:4	1:4	1:4	1;4	1:3	1:3	1:3	1:2	1:2	1:1.9	1:1.7	1:1.5	1:1.4	1:1.3
	0.8	1:74	1:37	1:24	1:18	1:14	1:12	1:10	1:8	1:7	1:7	1:6	1:5	1:5	1:4	1:4	1:4	1.3	19	1.3	1:3	1:2	1:2	1:1.9	1:1.7	1:1.5	1:1.3	1:1.2	1:1.1	01-05
E	0.9	1:55	1:32	1:21	1:16	1:12	1:10	1.9	1:7	1:5	1:5	1:5	15	1:4	1:4	13	13	13	13	13	1:2	12	1:1.B	1:1.5	1:1,4	1:1.2	1:1.1			
X	1.0	1:59	1:29	1:19	1.14	111	1.9	1.8	117	1:5	15	1:4	114	1:4	13	13	13	13	12	1:2.2	12	1:1.7	115	113	111	11.0				
2	1.2	1:49	1:24	1:16	1:12	19	1:7	1,6	15	1:5	1:4	1:4	13	1:3	1:3	1:2	1:2	1:1.9	1:1.8	1:1.6	1:1.5	1:1.3	1:1.1							
<i>₽</i>	1.5	1:39	1:19	1:12	1.9	1:7	110	15	1:4	1:3	1:3	1:3	1:2	1:2	1:1.9	1:1.7	1:1.5	1:1.4	1:1.2	1:1,1	1:1.0									
5	2.0	1:29	1:14	19	1.7	15	1:4	13	13	1:2	1:2	1:1.7	1:1.5	1:1.3	1:1.1	1:1.0														
10	2.5	1:23	1:11	17	15	114	13	12	12	1:1.7	1:1.4	112	1.1.0																	
윩	3.C	1:19	1.9	1:6	1:4	13	12	1:1.9	1:1.5	1:1.2	1:1.0																			
-	3.5	1:16	1:8	15	13	12	1:1.9	1:1.4	1:1.1																					
	4.0	1:14	13	1:4	13	12	1:1,5	11.1																						
	4.5	1:12	1.6	13	12	11.7	11.2																							
	5.0	1:11	15	1:3	1:2	1:1.4	1:1.0																							
	5.5	1:10	1:4	13	1:1.7	1:1.2																								

((60/Breath Rate) - Inspiratory Time)/Inspiratory Time - 1£ Ratio

Breathing Effort This push-to-turn knob sets the patient effort needed to trigger an assisted breath. It also sets the effort needed to reset the Apnea BPM rate with breath rates from 1 to 5 BPM. The settings are continuous from -10 to +10 cmH₂O/hPa, with zero being atmospheric pressure. When the patient's breathing effort is sufficient, the green Breathing Effort indicator lights up. Use the control settings above zero (the plus settings) to compensate for Positive End Expiratory Pressure (PEEP).

Warning

Positive Breathing Effort settings, without the use of PEEP, will cause the ventilator to autocycle (i.e., deliver breaths based on the selected inspiratory time at a 1:1 ratio).

Pressure Alarms Low Alarm sets the low pressure limit. The increments are $2 \text{ cmH}_2\text{O}/\text{hPa}$ for settings from 2 to 32 cmH₂O/hPa. Adjust the setting to a value just below the pressure necessary for proper patient ventilation.

The low pressure alarm sounds only when two consecutive breaths do not reach the selected limit, or if the limit is reached but the pressure fails to return to a level below the limit. You must manually reset the low pressure alarm by pushing Alarm Silence/Reset.

The High Alarm/Limit control sets the high pressure limit. The high pressure alarm sounds when the limit is exceeded in the Assist/Control or SIMV operating modes or when the limit is exceeded by 10 cmH₂O/ hPa in the Pressure Cycle mode. The inspiratory phase stops if the high pressure limit is exceeded. The audible alarm is automatically silenced if the following breath does not exceed the setting. The settings are 15 to 90 cmH₂O/hPa with increments of 5 cmH₂O/hPa.

Note Some circuit components will prevent a Low Pressure alarm by keeping the pressure in the circuit above the alarm limit. Examples of these components include hydrated heat and moisture exchangers (HMEs) and tracheostomy tubes. If the patient circuit is disconnected from the patient, but still connected to these components, a Low Pressure alarm may not sound.

Where such disconnections from a ventilator-dependent patient are possible, you must set the Low Pressure alarm to a level that permits an alarm to sound. To do this, simulate the disconnection; if a Low Pressure/Apnea alarm does not sound after two breath cycles, increase the alarm limit until an alarm sounds.

Note Parameter settings beyond the capabilities of the machine will produce a Setting Error alarm.

Pressure Limit Control (LP10 Only)



Pressure Limit Control The Pressure Limit Control is a mechanical, spring-loaded valve that operates independently of the ventilator's microprocessor. The control is designed for optional use in the Assist/Control and SIMV operating modes. It allows the ventilator to function like a pressure limited, time-cycled ventilator.

Note Pressure limit control ventilation is intended for use with uncuffed tracheostomy tubes, or in other patient circuit configurations which ensure an intentional artificial airway leak.

When the Pressure Limit Control is activated, the normal waveform of the LP10-I Ventilator is altered and the ventilator provides extended or plateaued pressures.

The figures below illustrate two printouts depicting waveforms with and without Pressure Limit.



Without Pressure Limit



Note The illustrations are actual reproductions of printouts from the printer.

Pressure Limit Control (LP10 Only)



Pressure Limit Control



Use the following instructions to activate and adjust the Pressure Limit Control.

- To set the Pressure Limit level on the LP10:
- **1.** Disconnect the patient from the ventilator. Provide another means of ventilation.
- **2.** Turn the Pressure Limit Control counter-clockwise until it stops. This reduces the pressure to near zero.
- Note The outside ring of the knob must be pushed in before the center adjustment knob can be moved.
 - 3. Set all controls to the prescribed settings.
 - **4.** A guide for setting the Volume Control is a calculation based on the patient's body weight. This factor should be approximately 7 ml/lb (18 ml/kg), or 100 ml, whichever is greater. Example: Patient weight = 55 lbs., set volume at 385 ml. Note that the Volume Control setting is a prescribed setting.
 - **5.** Block the Exhalation Manifold at the port that connects to the patient to observe the pressure on the Pressure Meter.

Warning



Pressure Limit Control



Wash hands thoroughly. Do not introduce germs or contaminants into the patient circuit while performing this task.

- **6.** Watch the needle on the Patient Pressure Meter. Note the highest pressure achieved during a machine-delivered breath.
- **7.** Turn the Pressure Limit Control clockwise in small increments each breath until the meter needle reaches, but does not exceed, the pressure value prescribed by the physician.
- **8.** When the prescribed Pressure Limit is reached, allow the machine to cycle for several breaths to verify stable operation.
- **9.** Reconnect the patient to the ventilator.

LP6 Plus and LP10 Clinician's Manual

10. When you first connect the patient to the ventilator, the value of the limited pressure may drop. (See Figures.) Watch the needle on the Patient Pressure Meter. Slight increases in the Pressure Limit setting may be required to increase the maximum pressure to the prescribed limit. Allow the machine to cycle several breaths to verify stable operation.



Pressure before patient connection

Pressure after patient connection

- **11.** Check to ensure that all settings are in agreement with the physician's prescription.
- **12.** Monitor the patient and the ventilator closely.
- 13. Set high pressure alarm approximately 5 cmH_2O/hPa above the pressure limit.

Warning



The normal operation of the Pressure Limit control will not allow a High Pressure alarm to occur, even when the tracheostomy tube or the patient circuit is blocked. The High Pressure alarm will sound only if the Pressure Limit valve fails to open.

Note Use a printer during setup and routine safety checks to confirm precise opening pressure of the Pressure Limit Control.

Power Sources

When used in the hospital, plug the ventilator into a convenient wall socket. If you use the ventilator in a wheelchair or in a car, connect it to an external 12 Volt DC battery. Your ventilator has an internal battery. Use the internal battery for short-term emergencies only, for example, when moving from one power source to another. Make sure you recharge the internal battery **immediately** after each use. Warning The batteries contain toxic chemicals and no attempt to remove or replace the batteries should be made by any one other than the homecare dealer or an authorized service center. **AC Power** Plug the ventilator into an appropriate AC grounded wall outlet. 110 220 The ventilator automatically operates from AC power when you plug it in and the rear panel Power switch is on. Make sure that you plug the cord into a properly grounded outlet. Warning The ventilator must be set to the proper voltage before plugging it into the AC outlet. Warnings The ventilator must be properly grounded when operating on AC power. If you have any doubts about the outlet's ground connection, have a qualified electrician examine the outlets. AC power sources in ambulances and aircraft are frequently unregulated. As a result, the ventilator may be exposed to high voltage levels that can damage it. Operation of the ventilator on improper power sources voids the warranty and will seriously damage the unit. Do not use a power convertor as a power source for the ventilator.

ᢗ

Your ventilator automatically recharges its internal battery whenever it is:

- plugged into an AC outlet, and
- the AC Power Switch is ON (1)

You can also recharge an external battery that is properly connected to your ventilator. See "Battery Performance" on page 39.

External Battery 12 Volt DC The ventilator can operate when properly connected to a 12 VDC external battery. If the AC power fails, the ventilator will automatically switch to an attached external battery. A Power Switchover alarm signals the changes from AC to DC (the external battery).

Caution Do not use the ventilator with a 24 VDC external battery.

A deep-cycle battery (74 amp-hour), in good condition, can power the ventilator without recharging for about 20 hours. A gel-cell type battery (34 amp-hour) can power the unit for about 10 hours before needing a recharge. Though the ventilator can recharge an external battery, it is less efficient than an Puritan Bennett-approved battery charger. Recharge an external battery 3 hours for each hour of use. For the battery test procedure, see page 40.

Note Do not reverse the positive and negative cables when connecting a battery to the ventilator. If you accidentally reverse the connections, a protective fuse in the battery cable or the ventilator's DC circuit breaker opens. The cable will not provide power to the ventilator. You must first correct the connections and install a correct replacement fuse in the cable. Reset the DC circuit breaker on the ventilator. Only then will the external battery power the ventilator.

Cautions Recharge an external battery immediately after use. You must use an approved battery charger (available from Puritan Bennett) to recharge external batteries used for extended periods of time. Do not use the ventilator's internal charger to recharge deeply discharged batteries.

Never connect a battery charger to an external battery while the battery is connected to the ventilator.

Using a Car Battery The ventilator will operate from a car battery. Connect the ventilator to the car with a cigarette plug cable from Puritan Bennett. Make sure the vehicle is running when the ventilator is drawing power. Otherwise, the ventilator may run down the car's battery.

Caution Always start the vehicle before connecting the ventilator to the car battery. Starting a vehicle when the ventilator is connected may damage the ventilator and void the warranty. Internal Battery 12 Volt DC The ventilator automatically switches to its internal battery if the AC power fails or the unit is disconnected from AC power and there is no adequate external battery connected. The internal battery also automatically takes over when an external battery's power becomes inadequate. A power Switchover alarm signals the change to the internal power source. ALARMS \bigcirc Low Pressure/Apnea The ventilator operates from 30 to 60 minutes on a fully charged inter- \mathbf{O} Low Power nal battery. The time depends on many factors, primarily, the selected settings. The amber Internal Battery light flashes continuously and an **High Pressure** \mathbf{O} Setting Error/Presilence audible alarm sounds every five minutes when the internal battery is in use. When approximately five minutes of power remain, a continuous Low Power alarm sounds. At this signal, **immediately switch to** -O- Power Switchover another power source. Use the internal battery only for emergency POWER power back-up. AC Pwr/Batt Charge If the internal battery is not used, exercise it every four to six weeks. External Battery That is, run the ventilator on its internal battery until the low power alarm sounds. Immediately switch to AC power and recharge the inter-–O– Internal Battery nal battery. With AC power ON, the ventilator will recharge the internal battery in any Mode, including Standby. Recharge a discharged internal battery for at least three hours before turning off the ventilator. This action will help prolong battery life. Warning If the patient's health or safety would be jeopardized by long-term power failure, a reliable back-up power source is mandatory. Do not regard the internal battery as a long-term back-up power source. Caution Recharge the Internal Battery for at least three hours immediately after use. An external battery cannot recharge the internal battery.

Routine Safety Check

Note Use this information along with instructions from the patient's physician. The procedure takes about ten minutes to complete and can be performed by a trained caregiver.

Warning

Disconnect the patient from the ventilator and provide another means of ventilation before starting these tests.

ALWAYS complete a routine safety check BEFORE connecting the patient to the ventilator.





PUSH

- 1. Check the Low Pressure Alarm.
- If the patient is not connected to the ventilator, connect a patient circuit and test lung to the ventilator. Then turn the ventilator on and switch it to an operating mode. Disconnect the small patient pressure tube from its port near the bacteria filter. Wait for two or three breaths.
- The Low Pressure/Apnea light should start flashing and the audible alarm should sound.
- Push the Alarm Silence/Reset button to silence the alarm.
- Reconnect the pressure tube to the ventilator. The Low Pressure/ Apnea light should stop flashing after a breath or two.

Check all the settings. 2.

- Compare the current settings to your written record of the prescribed settings.
- Make sure that all seven controls (located behind the front panel door) are set to the doctor's prescription.

3. Check the Patient Circuit.

- Check every connection in the circuit you are using or plan to use. Make sure that the tubing is routed correctly, that all connections are tight, and that there are no leaks.
- Check every part of the circuit for cracks and water. Each part must be in good condition. There should be no water in any part of the circuit.

Routine Safety Check

LP6 Plus and LP10 Clinician's Manual





Alarm Silence/Reset PUSH

- 4. Check all the alarm signals.
- Turn the Mode switch to Standby.
- Wait one second and turn the Mode switch to Assist/Control.
- All nine lights (on the top section of the front panel) should turn on • and the audible alarm should sound for two seconds.

If the ventilator is not plugged in or if the AC power switch is off, only eight lights will turn on. (The AC Power/Battery Charge light will not turn on.)

- Any connected accessories that signal an alarm (such as a remote alarm) also test their alarms.
- If the Power Switchover alarm is on, push the Alarm Silence/Reset button to turn it off.
- Push the Alarm Silence/Reset button and hold for three seconds.
- All nine (or eight) lights should turn on and the alarms should sound . for one second. The accessories also signal their alarms for one second.
- **5.** Perform a battery test.

Note If you do not have an external battery connected to the ventilator, **ignore** the part of this test printed in italics.

POWER
AC Pwr/Batt Charge
External Battery
Internal Battery
F POWER
AC Pwr/Batt Charge



- Make sure the ventilator is operating on AC power and the green AC
- Power/Battery Charge light is on. Turn off the AC power by pushing the "0" on the AC power switch located on the back panel.
- Make sure that the Power Switchover light starts flashing and the alarm begins to sound. Push the Alarm Silence/Reset button to turn it off.
- The External Battery light should be on.
- Press and hold the Battery Test button. The needle on the Patient Pressure Meter will point to low, medium, or high (within the lower window). If the needle points to low, recharge your external battery. See "Testing the Batteries" on page 40.
- Disconnect the external battery.
- Make sure that the Power Switchover light starts flashing and the alarm sounds. Push the Alarm Silence/Reset button to turn them off.
- The Internal Battery light should be flashing. .
- Press and hold the Battery Test button. The needle in the Patient Pressure Meter will point to low, medium, or high (within the lower window). If the needle points to low, recharge the internal battery **immediately** after completing the daily safety check. See page 42° . Perform Battery test after 3 hours of recharging.

LP6 Plus and LP10 Clinician's Manual

- Connect a fully charged external battery to the ventilator. Verify that the External Battery light on the front panel turns on.
- Turn the AC power on. Make sure that the green AC Power/Battery Charge light (located on the front panel) turns on.

Warning

If the ventilator does not pass the daily safety check or you cannot complete this check, call your vent supplier or an Puritan Bennett Service Representative immediately.

Monthly Safety Check

Note Use this information along with instructions from the patient's physician. The tests take about ten minutes to complete.

Warning

Disconnect the patient from the ventilator for the monthly safety check. Provide another means of ventilation before starting these tests.



- 1. With the ventilator turned off, confirm that the pressure meter is resting at -10 (\pm 1.0) cmH₂O/hPa.
- 2. Unplug the AC power cord. Visually inspect the plug and cord for damage or exposed wires which could cause a shock hazard.
- 3. Check the High Pressure and Low Pressure alarms.
- Plug the ventilator into AC power.
- Connect the patient circuit to the ventilator.
- Use your hand to block the part of the Exhalation Manifold that connects to the patient. Make sure no air comes out.

Warning

Wash hands thoroughly. Do not introduce germs or contaminants into the circuit while performing this test.

HIGH ALARM/LIMI ¢) ALARMS \bigcirc Low Pressure/Apnea Low Power –Ò– High Pressure \mathbf{O} Setting Error/Presilence \bigcirc Power Switchover Alarm Sllence/Reset PUSH ALARMS -Ò- Low Pressure/Apnea Ó Low Power High Pressure

Setting Error/Presilence

Power Switchover

NOTE If you are checking an LP6 Plus, **ignore** the steps marked with an asterisk.

- Turn the ventilator on and set the mode to Assist/Control.
- *Observe the Patient Pressure Meter. The maximum pressure displayed should be only a few cmH₂O/hPa above the pressure limit prescribed by your doctor.
- *Change the High Alarm/Limit switch to 15 cmH₂O/hPa.
- At the next attempt to deliver a breath, the High Pressure light should flash and the alarm should sound.
- The Exhalation Manifold should make a soft popping noise. Air should also come out of the large opening at the top of the Exhalation Manifold.
- *Change the High Alarm/Limit control back to the setting prescribed by your doctor.
- Push the Alarm Silence/Reset button to turn off the High Pressure alarm.
- Remove your thumb from the opening in the Exhalation Manifold. Make sure the Low Pressure/Apnea light starts flashing after two or three breaths and that the alarm sounds.
- Push the Alarm Silence/Reset button to silence the audible alarm.
- Connect a test lung to the Exhalation Manifold. The Low Pressure/ Apnea light should stop flashing after a breath or two.
- **4.** Use the built in Self Test.

Note Self Test will not function properly with pressure limit in use.

- Turn the mode switch to Standby.
- Connect a patient circuit to the ventilator.
- Block the end of the circuit completely. Allow no air to escape. •
- Press and hold the Alarm Silence/Reset and Battery Test buttons simultaneously. While holding these buttons, switch to the Assist/ • Control mode. Release the two buttons.
- The ventilator will test itself. Some lights will turn ON and OFF • and the needle on the Patient Pressure Meter will move back and forth.


LP6 Plus and LP10 Clinician's Manual

- If the self test is satisfactory, no red alarm lights will be lit. To use •
- the ventilator, turn the mode switch to Standby. Then, perform the Routine Safety Check. If the ventilator fails the self test, one of the alarm lights will flash and an audible alarm will sound. Call your homecare dealer or an Puritan Bennett Service Representative **immediately**. •

Warnings

If the ventilator fails the monthly safety check or you cannot complete this check, refer to the Troubleshooting Guide on pages 8 through 9, and/or call your homecare dealer or an Puritan Bennett Service Representative immediately.

With the AC power cord unplugged, visually check the AC power cord for damage or exposed wires that could cause a shock hazard.

Installation

Caution

Do not use the ventilator in a highly magnetic environment such as Magnetic Resonance Imagery (MRI). Doing so may damage the ventilator and affect operation.

Warning

Explosion hazard if used in the presence of flammable anesthetics.

Mounting or Positioning

Position the ventilator on a table or nightstand within six feet of an electrical outlet.

Keep the rear panel free of draperies or other items that could impede the air flow to the Inlet Filter port.

Warning

Do not block the inlet port.

Protect the ventilator from accidental liquid spills. Never place food or liquids on top of the ventilator. When used in a humid environment, and when cleaning,

- take precautions to protect the setting switches;
- keep the front panel door closed; and
- avoid spilling or allowing liquid to enter the unit.

Allow for the space requirements of additional equipment, e.g., humidification and supplemental oxygen. When in use, keep active humidifiers or the patient circuit at an elevation lower than the patient's trach. Moreover, keep them lower than the ventilator's Patient Air tube to prevent moisture from entering the ventilator.

Warning Do not subject the internal ventilator components to excessive moisture under any circumstances. Doing so may damage the ventilator and affect operation.

Mounting or Positioning

LP6 Plus and LP10 Clinician's Manual



During transport in cars and vans, securely position the ventilator and strap it down to avoid inadvertent jarring or damage. Use an external 12 VDC battery to power the ventilator.

You may connect the ventilator to the car's battery power with an accessory power cable equipped with a cigarette lighter plug. Connect the ventilator to the cigarette lighter cable/plug only after the car's motor in running.

Do not block the alarm port.

Emergency Vehicle In an emergency vehicle, employ a deck or mounting bracket to secure the ventilator. Maintain at least four inches between the rear panel Inlet Filter and the vehicle's wall. Position the ventilator to easily view all indicators with ready access to all operating controls.

Warning

AC power sources in ambulances and aircraft are frequently unregulated. As a result, the ventilator may be exposed to high voltage levels that can damage it. Operation of the ventilator on improper power sources voids the warranty and will seriously damage the unit.

Before plugging the ventilator into an unknown power source, check the voltage. If the voltage set switch is at 110 V, the supplied voltage must be between 100-127 VAC. If the voltage set switch is set to 220, the supplied voltage must be between 220 and 240 VAC. If the power source exceeds the proper range at any time, or if the voltage cannot be verified, use a 12 VDC battery, rather than risk damage to the ventilator.

Warnings

Stabilize and verify proper ventilator performance before connecting the patient to the ventilator.

Do not use a power converter as a power source for the ventilator.

Wheelchair	Mounting instructions vary from chair to chair. Consult the wheelchair manufacturer for standard wheelchair adaptations.
Warning	Never place an external battery above the ventilator. Use separate batteries to simultaneously power an electric wheelchair and the ventilator.
Caution	Never place a humidifier above the ventilator.
	 Here are some general guidelines to consider when using the ventilator in a wheelchair. When using a tray, place a partition between the battery and ventilator. Insert a partition in the tray mount between the ventilator and battery Locate this partition as far as possible from the ventilator's Inlet
	 Filter. If the ventilator and battery are in the same tray, cut drain holes in the tray to prevent any leaking battery fluid from reaching the ventilator. Place the battery in a plastic container to help insulate the ventilator from battery fluid. Always provide an external battery as the power source. Never use the same battery to power a motorized wheelchair and the ventilator at the same time. Protect the ventilator from spills and water seepage during bad
	 Weather or other conditions when using the unit on a wheelchair. Check the air Inlet Filter frequently when using the ventilator outdoors, especially when the air inlet is pointed toward the ground. To maintain a full charge on the internal battery, you must routinely connect any ventilator mounted on a wheelchair to AC power while the wheelchair is not in use. You must connect the ventilator to AC power as soon as possible after internal battery operation, no matter how short a time the ventilator operated on internal battery.
Warning	Always locate the external battery as far away from the ventilator as possible. The distance will help prevent battery gases from drift- ing toward the ventilator's air inlet.

Power Connections

General Any one of three power sources can power the ventilator.

- External AC,
- External 12 VDC battery, or Internal 12 VDC battery.

When plugged into a functioning wall outlet with the AC power switch ON, the ventilator automatically selects the AC power source. It will operate indefinitely on AC. All three sources may be connected to the ventilator at the same time. If the AC power fails, the ventilator automatically switches to the next best power source.

AC Power The ventilator requires 0.5 amps (typical) at 110 VAC. If the voltage select switch is set to 110 V, the supplied voltage must be between 100 and 127 VAC.

> The ventilator requires 0.3 amps (typical) at 220 VAC. If the voltage select switch is set to 220 V, the supplied voltage must be between 220 and 240 VAC.

> The ventilator has a hospital grade, 3-pronged AC power connector. Note, however, that the connector's hospital grading depends solely on its use in a hospital grade electrical outlet. If you encounter a 2-pronged outlet, replace it with a properly grounded 3-pronged outlet.

> When traveling to another country (or a region with a different power system), you may encounter two problems. First, the nominal voltage may be different. Note the ranges given above for 110 and 220 VAC respectively.

Warning

Set the Power Select Switch before plugging the ventilator into a new power system.

The second problem you may encounter is the plug itself. It may not fit into the outlet. There are two solutions. First, have a qualified electrician remove and replace the ventilator's plug with one designed for the local outlets. Second, you may use an adaptor. Make certain that the adaptor has no active electronic components and that it is not a power converter.



Check to see if the ventilator's External Battery light is lit. This light signals that your ventilator is properly connected and is using the external battery.

LP6 Plus and LP10 Clinician's Manual

Note Do not reverse the positive and negative cables when connecting a battery to your ventilator. If you accidentally reverse the connections, a protective fuse in the battery cable or the ventilator's DC circuit breaker opens. With an open circuit, the cable will not provide power to the ventilator. You must first correct the connections and install a correct replacement fuse in the cable. Reset the DC circuit breaker on the ventilator. Only then will the external battery power the ventilator.

> You may order batteries and connecting cables from Puritan Bennett. These accessories come with specific instructions for connection and use. The battery and case provided by Puritan Bennett have a cable with a 3pin connector. When properly used, this cable/connector ensures against reversing the connections between the battery and ventilator. Use of other cables may damage the ventilator or make it inoperable when the cable connections are accidentally reversed.

Battery Performance As they age and due to their chemical make-up, batteries lose their capacity to retain an electrical charge. Typically lead-acid batteries lose 7% of their capacity each year. For best performance, follow the manufacturer's instructions.

The following affect the life of the battery:

- Ambient temperature,
- Charge level,
- Storage conditions,
- Time, and
- The number of "deep cycles."

For maximum efficiency, operate or store the battery at room temperatures. It will charge and discharge most efficiently in such an environment.

To ensure maximum running time of the ventilator on any external battery, keep the battery fully charged. Some batteries need to be discharged and recharged monthly. Refer to the battery manufacturer's instructions. Recharge any external battery immediately after use. Use a standard battery charger. The time required to recharge a battery varies. Generally, with a 10 amp standard charger, there is a 1:1 ratio (one hour of recharge for each hour of use). CautionsRecharge an external battery immediately after use. You must use an
Puritan BennettPuritan Bennett-approved battery charger to recharge
external batteries used for extended periods of time. Do not use the
ventilator's internal charger to recharge deeply discharged batteries.First connect the battery to the standard charger. Then connect the
charger to AC power.NEVER connect a battery charger to an external battery while the
battery is connected to the ventilator.A 30 to 40 amp hour battery, in good condition can power the ventilator
for about 10 hours without recharging. A 75 to 80 amp hour battery
provides power for about 20 hours between charges.

Testing the Batteries Make sure that the external or internal battery is powering the ventilator before testing the battery condition. To run the test, press and hold the Battery Test button. The needle on the Patient Pressure Meter registers the battery status in the window below. A fully charged battery in good condition will register in the Normal/High range.



Notes The Battery Test meter is only a relative indicator of the remaining battery charge. An older battery may register a high charge level, but discharge more rapidly. Carefully monitor battery power sources. Always have a back-up power source available.

The total life expectancy of any battery is affected by the number of times it is deep cycled, i.e., nearly 100% discharged.

Power Connections

LP6 Plus and LP10 Clinician's Manual



The percentage of discharge relates directly to the number of cycles the battery can deliver. As a battery ages its ability to power the ventilator decreases. Take this into account in all applications, but especially in portable applications where another power source may not be readily available.

The graph displays the relative impact of deep discharge on battery life.

The time since recharge when a battery is being stored affects how long it can adequately power the ventilator.

The ventilator will switch to the internal battery and signal an alarm when the external battery's voltage drops below a preset limit. The alarm indicates the ventilator can no longer operate reliably on the external battery.

Special precautions when using an external battery



Warning

Place the battery as far away as possible from the ventilator's Inlet Filter (located on the rear panel).

When using a tray to hold both the battery and the ventilator, put a partition between the battery and ventilator.

Batteries need to be discharged and recharged monthly. Refer to the battery manufacturer's instructions.

Using an external battery has nothing to do with the emergency internal battery. An external battery neither recharges nor maintains the charge of the internal battery.

NEVER place the battery above or on top of the ventilator. Use separate batteries to power a motorized wheelchair and the ventilator.

You may use some gel-cell, spill-proof batteries aboard commercial aircraft. Follow these regulations:

- F.A.A.: Title 49 C.F.R., parts 100 199, paragraphs 173.250A and 170.260D.
- C.A.B.: Air Transport of Restricted Articles, Circular No. 6D, page 57, Article # 1924.
- I.A.T.A.: Restricted Articles Regulations, Article # 1924, Packaging Note 802, Section VI p. 149 and Section X p. 207.

ŧ	POWER
0	AC Pwr/Batt Charge
lacksquare	External Battery
-j¢<	- Internal Battery



Internal Battery 12 Volt DC Use the Internal 12 VDC battery for emergency use only. It requires no special connections. The ventilator switches to the internal battery when other power sources fail or drop below adequate levels. The Power Switchover alarm signals whenever the ventilator switches from AC or an external DC battery to its internal emergency battery.

> When powered by the internal battery, the amber Internal Battery light flashes continuously. In addition, an audible tone sounds every five minutes. When approximately five minutes of power remain, a continuous audible alarm sounds. **Immediately** switch to another power source.

> A fully charged internal emergency battery will power the ventilator from 30 to 60 minutes depending on the operating conditions. Test the charge level of the internal battery by pushing the Battery Test button. Read the charge level on the Battery Condition scale of the Patient Pressure meter.



Note The ventilator must be operating on internal battery power to obtain a reading of the internal battery's charge level.

Warning

To prevent shortened longevity, recharge the internal battery for at least three hours after each use. Always recharge the internal battery before turning off AC power to the ventilator.

Keep the internal battery fully charged at all times. The ventilator charges the internal battery when it is connected to an AC power source and is in any operating mode **including Standby**. An external battery **cannot** recharge the internal battery.

The information on external battery performance also applies to the internal battery. See pages 38 through 40.

Exercise the internal battery every four to six weeks. That is, run the ventilator on its internal battery until the low power alarm sounds. Immediately switch to AC power and recharge the internal battery for at least three hours.

Patient Ventilator Circuit



The Patient Ventilator Circuit has a long flexible hose and several other parts shown in the diagram. It attaches to the ventilator and is the patient's link to the breaths needed. Inspect it every day.

- Make sure there are no cracks in the hose.
- •
- Be certain all the connections fit securely to prevent leaks. Clean the Exhalation Manifold daily. Replace parts regularly before they wear out. Regular replacement is essential for successful ventilation. See the instructions that come • with the patient circuit.

A.	Flex Tube: Use this tube to connect the Patient Ventilator Circuit
	to a tube adaptor on your trach tube. The tube's flexibility makes
	the circuit more comfortable.

- **B.** Exhalation Manifold: This part contains a mechanism that controls inhalation and exhalation. During inhalation, the white mushroom inflates and allows air to enter the patient's lungs. During exhalation, the mushroom deflates and allows air to be expelled.
- **C. Patient Air Hose:** This is the large hose between the Bacteria Filter and the Exhalation Manifold.

Warning Do not use antistatic or conductive hoses or tubing.

- **D. Patient Pressure Tube** (included with patient air hose): This small tube connects the Patient Pressure port on the ventilator to the Exhalation Manifold.
- **E. Exhalation Tube** (included with patient air hose): This small tube connects the Exhalation Valve port to the Exhalation Manifold.
- **F. Bacteria Filter:** This filter cleans the incoming air before the patient inhales it.

Warning Ensure the proper connection and operation of the Patient Circuit.

There are other accessories available. Some add oxygen or moisture to the incoming air. Others set Positive End Expiratory Pressure, or print a permanent record of the ventilator's operation. Contact Puritan Bennett for a complete list of available accessories.

Caution Adding attachments or other components to the breathing system will increase inspiratory and expiratory resistance.

Exhalation Manifold

The Exhalation Manifold directs the flow of gases to and from the patient. Broadly speaking, this assembly consists of a manifold body, a mushroom valve, and a cap. Refer to the manufacturer's instructions. Before using it with the patient, secure all connections, ensure the seating of the mushroom valve. Make sure this valve prevents the escape of any gases during inspiration and that it releases properly during exhalation.

Warning

Ensure the proper connection and operation of the exhalation manifold daily. The patient could be at risk if the manifold fails to function as intended. Connecting patient pressure and exhalation tubes to the opposite port prevents proper patient ventilation.

Note To safeguard the patient, upon start-up, the ventilator dumps the first breath through the exhalation manifold. The unit's microprocessor requires one cycle to establish its reference point, that is, the operating mode and settings to use. This operation prevents delivery of incorrect volumes that could result in excessive pressure build-up.

Humidification

- **Short Term** When using humidification for a short period or during transport, use an artificial nose with the ventilator. Connect this regenerative humidifier to the patient circuit between the trach connector and the flextube. Or follow the manufacturer's instructions.
- **Extended Use** The patient's physician will usually prescribe humidification of the delivered gases. Due to their popularity, Puritan Bennett offers special humidifier mounting brackets. The brackets include instructions for use.

For complete instructions on the operation, cleaning, and sterilization of the humidifier, refer to the appropriate sections of the humidifier manufacturer's instruction manual.

Warnings

Always position the humidifier at a level lower than the patient. The humidifier should also be at the same or lower level than the ventilator. This will help prevent excessive moisture from entering the patient or ventilator.

Some active humidifiers do not have temperature monitoring or alarm capabilities. Failure to monitor air temperature may allow inspired air to become too hot. Thermal injury to the patient's airway may result. Always follow the recommendations of the humidifier manufacturer.

Warnings

Condensation forms in the Patient Circuit over time. Periodically check for moisture in the Patient Circuit. When present, remove the moisture. Before attempting to dry the circuit, disconnect it from the ventilator. Never subject the internal ventilator components to moisture or high pressure. Doing so may damage the ventilator. Always drain the tubing away from the patient connection.

Do NOT use compressed gas to clear moisture from the pressure line when connected to the patient. First disconnect the ventilator and circuit.

Supplemental Oxygen



- **Methods** At times, the attending physician prescribes supplemental oxygen. In such cases, the ventilator has two oxygen enrichment methods.
 - **1.** You can bleed oxygen into the Patient Circuit for concentrations up to approximately 40%.
 - **2.** You may deliver oxygen into the rear panel Inlet Filter Port for concentrations up to 100%.

In hospitals, oxygen comes through piped systems or high pressure tanks. Liquid reservoirs, oxygen concentrators, or high pressure tanks are sources of oxygen in the home setting.

Oxygen concentration guidelines on the next page are based on 100% oxygen sources. The concentrations are somewhat less when using an oxygen source below 100%.

Warnings

To ensure the prescribed oxygen concentrations at the proximal airways, measure them with a calibrated analyzer.

Liquid and gaseous oxygen are not flammable, but can cause other materials to burn faster than normal. Skin exposed to liquid oxygen may become frostbitten. When using oxygen devices, always follow the manufacturer's instructions. Keep oxygen warnings visible to the caregiver and the patient.

Oxygen Delivery into the Patient Circuit. (Method 1 for concentrations up to 40%)

First, connect the Bacteria Filter to the Patient Air tube. Then connect the Oxygen Elbow to the Bacteria Filter. Finally, attach the Patient Circuit to the Oxygen Elbow.

Warnings

If you are using the 90° elbow (see illustration on page 48) to deliver supplemental oxygen, care should be taken to securely attach the oxygen line to the elbow's oxygen fitting. If the oxygen tube becomes disconnected from the 90° elbow, the drop in pres-sure may not be significant enough to sound the ventilator's Low Pressure Alarm. This means that the patient may not receive the prescribed levels of oxygen and the tidal volume may be decreased, but you may not be alerted by the ventilator's audible alarm sys-tem. To prevent this, you should push the oxygen line tubing as far down on the elbow's oxygen fitting as possible. to reduce the possidown on the elbow's oxygen fitting as possible, to reduce the possibility of inadvertent disconnection.

The formula below is a guideline to the flow of 100% oxygen to be bled into the Patient Circuit to achieve desired oxygen concentrations:

 $LPM = [(BPM X V_T) (C - 0.21)] \div 0.79$

Where:

- LPM = $100\% O_2$ Flow in Liters/Minute
- BPM = Breathing Rate in Breaths/Minute VT = Tidal Volume in Liters
- = Patient O2 Concentration desired (i.e. 30% = 0.3)
- Note Oxygen bled into the circuit is additional volume. Adjust for this volume when setting the ventilator volume.

Oxygen Delivery Through the Inlet Filter. (Method 2 for concentrations up to 100%)

You can achieve high oxygen concentrations at the proximal airway by delivering source oxygen directly into the air Inlet Port located on the rear panel of the ventilator. Use an optional Oxygen Enrichment kit. The kit contains complete instructions.

LP6 Plus and LP10 Clinician's Manual



Accessories

A number of accessories are available for the ventilator, including a remote alarm and a printer. See your Puritan Bennett representative for details.

Caution

Use Puritan Bennett approved accessories in conjunction with the ventilator. The use of other accessories may prevent proper operation of the ventilator, or may damage the unit.

Positive End Expiratory Pressure (PEEP)



The patient's physician may prescribe PEEP. An accessory PEEP valve maintains a positive pressure in the patient's airway during exhalation. This valve is attached to the Exhalation Manifold of the Patient Circuit. (See Figure for proper connections.) Puritan Bennett supplies PEEP valves. See your Puritan Bennett representative for details and model numbers.

You may set the trigger sensitivity up to $+10 \text{ cmH}_2\text{O/hPa}$ with the Breathing Effort control to compensate for PEEP pressures during the patient's inspiration.

Note When used with uncuffed tracheostomy tubes or other patient circuits which ensure an intentional leak in the artificial airway, PEEP valves will have difficulty maintaining set PEEP levels. Leaks may be supported by the use of continuous flow; examples of two commonly used techniques of continuous flow are diagrammed on the next page.

Caution

Continuous flows of greater than 20 LPM may result in setting error alarms. Certain patient profiles and circuit configurations may result in a setting error alarm at flows of less than 20 LPM.

Note PEEP, when used with low tidal volumes, may affect the delivered volume. Monitor volume delivery to assure accuracy.

You must set the Low Alarm level above the PEEP value or the ventilator will give constant Low Pressure/Apnea alarms.

Warning

Breathing effort control settings above zero without PEEP will cause the ventilator to autocycle (i.e., deliver breaths based on the selected inspiratory time at a 1:1 I:E ratio).

Accessories

LP6 Plus and LP10 Clinician's Manual



IMV-H Bag: Used successfully to support the patient's spontaneous breaths associated with SIMV. It also helps to stabilize and maintain PEEP. Best suited for high spontaneous inspiratory flow and demands. Maintains stability and ensures PEEP. Requires two sources of oxygen.



 O_2 Enrichment Kit: Used successfully to support the patient's spontaneous breaths associated with SIMV. It also helps to stabilize and maintain PEEP. Oxygen delivered through the Inlet Filter (for concentrations up to 100%). Requires only one oxygen source.

Pressure Monitoring



Supplemental Oxygen

Use either the ventilator's pressure meter or the optional printer to monitor proximal low and high pressure. The ventilator's pressure meter provides a *relative indication* of the cycling pressures created by the volume of delivered air.

The optional printer, on the other hand, provides a *precise pressure reading* generated by the electronic pressure transducer. You may also use a properly calibrated, commercially available external manometer to determine precise pressure readings.

The ventilator has provisions for the addition of prescribed supplemental oxygen. With an oxygen elbow accessory, the ventilator delivers up to approximately 40% oxygen concentration. With an oxygen enrichment accessory, the ventilator can deliver concentrations up to 100%. Instructions accompanying these accessories describe how they deliver supplemental oxygen. Use a calibrated analyzer to measure and ensure prescribed oxygen concentrations at the proximal airway. (See pages 48 through 49.)

Warnings

If you are using the 90° elbow (see illustration on page 48) to deliver supplemental oxygen, care should be taken to securely attach the oxygen line to the elbow's oxygen fitting. If the oxygen tube becomes disconnected from the 90° elbow, the drop in pressure may not be significant enough to sound the ventilator's Low Pressure Alarm. This means that the patient may not receive the prescribed levels of oxygen and the tidal volume may be decreased, but you may not be alerted by the ventilator's audible alarm sys-tem. To prevent this, you should push the oxygen line tubing as far down on the elbow's oxygen fitting as possible, to reduce the possibility of inadvertent disconnection.



Humidification During normal extended ventilation, the physician may recommend an active humidifier. Several humidification devices are compatible with the ventilator. Instructions for connecting a humidifier accompany Puritan Bennett's mounting bracket accessory. See "Humidification" on page 46.

> You may use a passive, in-line regenerative humidifier such as an "Artificial Nose" to preserve humidification during patient transport or wheel-chair transport. This accessory is intended for short term use only. A regenerative humidifier retains portions of the exhaled heat and humidity, to aid in conditioning subsequent inhalations.

Note Hydrated artificial noses may prevent a Low Pressure alarm by keeping the pressure in the circuit above the alarm limit. If the circuit is disconnected from the patient, but still connected to the artificial nose, a Low Pressure alarm may not sound.

Where such disconnections from a ventilator-dependent patient are possible, you must set the Low Pressure alarm to a level that permits an alarm to sound. To do this, simulate the disconnection; if a Low Pressure/Apnea alarm does not sound after two breath cycles, increase the alarm limit until an alarm sounds.

- **Remote Alarm** You may connect a remote alarm to the ventilator. This ventilator relays any alarm signal to locations up to 200 feet away from the ventilator. Contact your Puritan Bennett representative for details.
 - **Printer** The optional printer produces a permanent record of the ventilator's performance. See the manual supplied with the printer for detailed operating instructions and interpretation of printed reports.

Cleaning and Maintenance

This section contains instructions for cleaning and maintaining the LP6 Plus and LP10 Ventilators. You must also consult such instructions for the various accessories used with the ventilator.

Note Use the information in this and the accessories' sections, as well as established procedure and your homecare dealer's instructions, to clean your ventilator.

Warnings

A ventilator patient is highly susceptible to respiratory infections. Dirty or infected equipment may be a source of infection. Clean equipment is essential for successful ventilation. Be sure to wash your hands thoroughly before and after cleaning the ventilator or accessories.

Do not sterilize the ventilator with ethylene oxide (ETO). Doing so may expose the patient to hazardous residues.

Caution

Do not use MEK, trichlorethylene, or alcohol to clean the ventilator. Their use may damage the unit's surface. Do not sterilize the ventilator with steam. This process will expose the ventilator to excessive moisture.

Patient Circuit and Humidifier



Inlet Air Filter

Frequency Check the filter weekly; daily when the ventilator is used during transport or outdoors. Replace the filter when it becomes dirty. A blocked inlet filter may cause a setting error alarm. Failure to change the filter may cause serious damage to the ventilator. It could also invalidate the warranty.

Warning

Do not operate the ventilator without an inlet air filter. Using the ventilator without a filter may damage the ventilator. Use only filters supplied by Puritan Bennett.

Supplies The only supplies needed are replacement filters.

- **Procedure** 1. Twist the plastic cover over the inlet filter.
 - 2. Remove the two particle screens that sandwich the air filter. Periodically wash the screens in a mild soap solution. Discard the old filter.
 - **3.** Place the new filter between the particle screens. Position the new filter with the printer side toward the ventilator. Make sure the black o-ring is in place.
 - **4.** Place the assembly into position. Twist the plastic cover into place over the filter assembly.

Note Do NOT reuse filters. Discard them after removal.

Ventilator Surface

- **Frequency** Clean as often as the surface becomes soiled.
 - **Supplies** Use a mild soap solution and a damp cloth.
- **Procedure** 1. Clean with a mild soap solution and a damp cloth. Squeeze the cloth thoroughly before applying it to the unit's surface.

LP6 Plus and LP10 Clinician's Manual

2. DO NOT allow liquids to enter the ventilator.

Warning

9 Never allow liquids to contact internal ventilator components under any circumstances. Liquid will damage the ventilator and endanger the patient.

We recommend using a ventilator cover to protect against liquids getting into the ventilator.

Storage of the Ventilator



Before storage, charge the internal battery for a minimum of 10 hours. When storing the ventilator for extended periods, exercise the internal battery monthly. Run the ventilator on its internal battery until the low power alarm sounds. Immediately switch to AC power and recharge the internal battery for at least ten hours.

Wrap the AC power cord around the Cord Wrap/Rear Feet. Begin the wrap by placing the cord in the lower left foot. Use the inner groove. Continue to the upper left, upper right, and lower right feet. Keep the first and second wraps in the inner groove. At the start of the third wrap, place the cord in the outer groove of the lower left foot. Place the plug in the holder located at the top of the rear panel.

Scheduled Maintenance

The ventilator needs periodic maintenance. Follow the schedule below to ensure peak performance from the ventilator.

Maintenance	Interval	Action Required
Change the Inlet Air Filter	As Needed	See page 57.
Preventive Maintenance	Every twelve (12) months, or 6000 operating hours, whichever occurs first.	Contact your dealer
Battery Discharge/Recharge	Monthly	See pages 39 and 40.



You can check the total operating time on the Patient Pressure meter. To do so, press the Alarm Silence/Reset and Battery Test buttons simultaneously.

When the needle points to 30 or more, contact your homecare dealer for service.

Warning

The ventilator must be serviced per Puritan Bennett recommendation by authorized personnel to ensure proper performance.

Service Policy

The LP6 Plus and LP10 Volume Ventilators are warranted against defects in workmanship and materials. The full warranty on page 64 provides details. Do not make any service repairs on this equipment during the stated warranty period. Any unauthorized work immediately voids the warranty. If you need information or assistance, or if the information in this manual is insufficient, contact your local Puritan Bennett representative. Or, call Puritan Bennett Technical Services at: 1.800.255.6774

Puritan Bennett does not recognize the owner of a ventilator as an authorized service representative. Puritan Bennett will not be liable for any repairs attempted by the owner. Any such attempted repairs other than specified non-warranty repairs voids the warranty. Parts and labor costs incurred by the owner will not be reimbursed Nellcor Puritan Bennett.

Puritan Bennett will make available on request diagrams, component parts lists, descriptions, calibration procedures and instructions to assist in the repair of parts classified by Puritan Bennett as repairable.

Before returning any device to Puritan Bennett, you must get a Return Authorization Number by calling Puritan Bennett at one of the numbers given above.

Specifications

LP6 Plus and LP10 Volume Ventilators

Power Line:	110 VAC range (100-127 VAC),1 Ampere or 220 VAC range (220-240 VAC), 1 Ampere, 50/60 Hz., external voltage selector switch	
Power Usage		
Maximum:	630 kw hours per year.	
Nominal:	315 kw hours per year.	
Extension Cord Gauge:	Use 3-conductor harmonized cord only; up to 49' use 18 gauge cord; up to 99', use 16 gauge cord: up to 200', use 14 gauge cord.	
External Battery:	12 VDC. 6 Amperes. Approximately 20 hrs. operation with 75-80 Amp-hour 12 VDC deep-cycle, gel-cell battery. Approximately 10 hrs operation with 35-40 Amp-hour 12 VDC deep-cycle, gel-cell battery.	
Internal Battery:	Approximately 1 hour operation.	
Type:	Volume ventilator.	
Motor:	Brushless induction.	
Pump:	Piston, 100 to 2200 ml tidal volume capability.	
Front Panel Controls:	1 5	
Alarm Silence/Reset:	Push button to silence alarms during events or reset after events; used with Battery Test button to read machine operating hours on Patient Pressure meter.	
Battery Test:	Push button to show battery charge level on the lower window of Patient Pressure meter.	
Mode:	Rotary switch to set ventilator operating mode: Standby Assist/Control, SIMV, or Pressure Cycle.	
Low Alarm:	Rotary switch to set limit for Low Pressure alarm: 2 to 32 $\rm cmH_2O/hPa$ in increments of 2 $\rm cmH_2O/hPa$	
High Alarm Limit:	Rotary switch to set limit for Assist/Control Pressure Cycle mode: 15 to 90 cmH_2O/hPa in increments of 5 cmH_2O/hPa	
Volume:	Push-to-turn knob to set volume: continuously adjustable from 100 to 2200 ml.	
Breath Rate:	Rotary switch to set breathing rate: 120 BPM in increments of 1 BPM and 2238 BPM in increments of 2 BPM.	
Inspiratory Time:	Rotary switch to set time for delivery of set volume: 0.5 to 1.0 sec. in increments of 0.1 sec.; 1.2 sec.; and 1.5 to 5.5 sec. in increments of 0.5 sec.	
Breathing Effort:	Push-to-turn knob to set pressure level for detecting breathing effort; continuously adjust-able from -10 to +10 cmH_2O/hPa	
Pressure Limit (LP10 Only):	Locking knob sets pressure limit level from 15 to 50 $\rm cmH_2O/hPa$ or closes off the pressure limit feature.	
Input		
Patient Pressure:	Port for connection to the proximal pressure line of the patient circuit.	
Outputs		
Patient Air:	22 mm tube for connection to the bacteria filter.	

April 2003

Exhalation Valve: Indicators Normal Events Patient Pressure Meter:

> Breathing Effort: Power:

Alarms:

Audible Alarms Pulsating Tone: Steady Tone: Reminder Tone:

Rear Panel Controls

AC Circuit Breaker Inputs Inlet Filter: External Battery: Communications Port Outputs Vent: Remote Alarm Communications Port Environment: Operating: Storage:

Maintenance:

Dimensions: Weight: Resistance Factor: Compliance Factor: Emergency Pressure Relief: Flow: Sensors Primary Pressure Purpose Location Type Range Port for connection to the exhalation valve of the patient circuit.

Displays patient pressure, -10 to +100 cmH₂O/hPa; also displays battery charge and machine hours of operation when appropriate buttons are pressed. Green LED activated by adequate patient breathing effort. LEDs indicate operating power source: green AC Pwr/Batt Charge, amber External Battery, flashing amber Internal Battery. Flashing red LEDs: Low pressure /Apnea, Low Power, High Pressure, Setting Error, Power Switchover. Low Pressure/Apnea, Low Power, High Pressure, Setting Error, Power Switchover. Loss of microprocessor control. Every five minutes when powered by Internal battery, each time accessory printer generates a report. Internal to the AC Power Switch (1 for ON; 0 for OFF), 1 Ampere Intake for patient air. Screw off cap for filter change. Connection for 12 VDC battery. Calibration information during service procedure. Cooling vent for internal ventilator components Connection for optional alarm accessories. Connector for optional printer Do not use or store in the presence of strong electromagnetic fields. 5° C to 40°C (41°F to 104° F), 10% to 90% RH. -20°C to 50°C (5° F to 104°F), 10% to 90% RH; when moving the LP6 Plus or LP10 Ventilator from a non-operating to an operating environment, allow a minimum of one hour temperature stabilization before use. Preventative maintenance must be performed by qualified personnel every twelve (12) months or 6000 operating hours, whichever occurs first. 9.75" X 14.5" X 13.25" (24.6 X 36.8 X 33.6 cm) Approximately 34 pounds (15.5 kg) Maximum of 5 cmH₂O @ 60 LPM 0.57 ml/cmH₂O for A/C breaths 100 cmH₂O/hPa (approximately) 20-100 LPM

Measures the proximal pressure for use in pressure control and pressure monitoring. Proximal Gauge pressure sensor -20 cmH₂O/hPa to 120 cmH₂O/hPa (compensated). Temperature Range: -18° C to

Accuracy

+63° C. $\pm 2.5 \text{ cmH}_2\text{O/hPa}.$

Relative Motor Position Purpose Location Type Range Accuracy

Senses the relative motion of the piston drive motor. Stator of motor Hall sensor Digital NA

Limited Warranty

Puritan Bennett warrants to the owner that the LP6 and LP10 Volume Ventilator, exclusive of expendable parts and other accessories, shall be free from defects in material and workmanship for 24 months from the original date of sale. Puritan Bennett's sole obligation, with respect to any such defect, is limited to the repair or, at Puritan Bennett's option, replacement of the ventilator. Purchaser pays return freight charges.

This warranty is made on the condition that prompt notification of a defect is given to Puritan Bennett within the warranty period, and that Puritan Bennett has the sole right to determine whether a defect exists.

This warranty is conditional on the performance of Preventive Maintenance at a minimum of once every 6000 operating hours, or recertification every twelve (12) months (whichever occurs first) by service personnel qualified by Puritan Bennett. The warranty does not apply to ventilators that have been partially or completely disassembled; altered; subjected to misuse, negligence, or accident; or operated other than in accordance with the instructions provided by Puritan Bennett. This includes repair by unauthorized personnel.

This warranty represents the exclusive obligation of Puritan Bennett and the exclusive remedy of the purchaser regarding defects in the ventilator.

THIS WARRANTY IS GIVEN IN LIEU OF ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FIT-NESS FOR A PARTICULAR PURPOSE.

No person is authorized to modify, in any manner, Puritan Bennett's obligation as described above.

Keyword Index

AC power 14, 26, 28, 35, 37–38, 40 AC power switch 14–15, 27, 30, 62 Air tube 13, 34, 49 Alarm lights 6–7, 33 Alarm reference guide 12 Alarm silence/reset 7, 11, 22, 29–30, 32, 58 Assist/control 17-19, 22-23, 30, 32, 61 Assisted breath 13, 18, 22 Audible alarm 6-8, 17-18, 62 Bacteria filter 45, 49 Battery test 11, 30, 32, 40, 60 Battery condition 39–40, 42 Breath rate 16, 18–20, 49, 61 Breathing effort 11, 17–18, 22, 61–62 Circuit breaker 9, 15, 27, 39, 62 Cleaning 55–58 Electrical interference 4 Exhalation manifold 9, 44-46, 51 External battery 9, 15, 19, 27–28, 30, 36–41, 61–62 Filter 49, 62 Flow rate 20 High alarm 9, 17, 19, 22, 25, 61 High pressure 6–7, 17, 19, 31, 62 Humidifier 46, 53, 56 I-E ratio 20-21 Infection 54 Inlet filter 14, 41, 48–49, 62 Inspiratory time 16, 20–21, 61 Internal battery 9, 19, 26, 28, 37, 41–43, 61–62 Low alarm 6, 8, 17, 22, 29, 61 Maintenance 54, 62 Microprocessor 8, 46, 62 Mode 16, 18–19, 61 Oxygen 48-49, 53 Patient circuit 8, 10, 13, 17, 29, 44-49, 51, 55, 62 Patient pressure meter 11, 24, 32, 40, 61–62

PEEP 22, 51–52 PEEP valve 51 Power source lights 11 Pressure cycle 7, 19, 22, 61 Pressure limit 8, 17–18, 23, 32, 61 Pressure limit control 10, 13, 24-25 Pressure relief 15 Pressure tube 13 Remote alarm 6, 15, 53, 62 Safety 29–33 Serial number 15 Setting error 6, 9, 20, 22, 62 SIMV 18, 22–23, 61 Standby 8, 19, 30, 43, 61 Sterilize 54 Storage 41, 57, 62 Vent 15, 62 Voltage select 37 Voltage switch 15 Volume 8, 16, 20, 24, 49, 61 Warranty 26, 28, 64

Tyco Healthcare Group LP

Nellcor Puritan Bennett Division 4280 Hacienda Drive Pleasanton, CA 94588 Toll Free: 1.800.NELLCOR

Rx ONLY